


INTERRUTTORE PEDALE
PEDAL-SWITCH
INTERRUPTEUR-PEDAL

Cod. 114.11


Amp.16

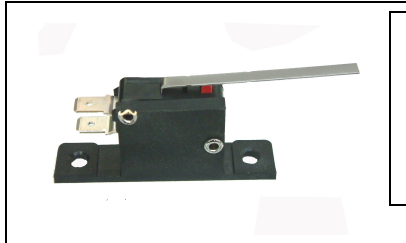

INTERRUTTORE PEDALE
PEDAL-SWITCH
INTERRUPTEUR-PEDAL

Cod. 180.05

Amp. 8

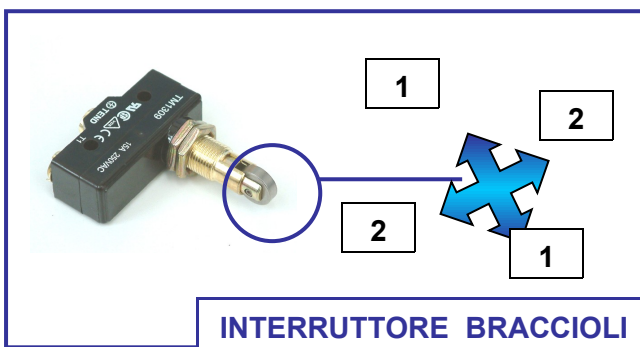

INTERRUTTORE BRACCIOLI & PEDALI
ARM & PEDAL SWITCH
INTERRUPTEUR PEDAL &
JEANNETTE

Cod. 104.15

PULSANTE
PUSH-BUTTON
BOUTON

0 > 1 > 0

Cod. 151.52

PULSANTE -STOP
STOP PUSH-BUTTON
BOUTON DE STOP

0 > 1

Cod. 151.60

INTERRUTTORI PER PULSANTI
SWITCHES FOR BUTTONS
INTERRUPTEURS POUR BOUTONS

BRETER

Cod. 151.41

N.C

N.O

Cod. 151.61

TELEMECAN

Cod. 151.135

N.O

N.C

Cod. 151.133

